



Please read this installation guide in conjunction with the standard tray installation guide supplied.


Radiate & Mantis bath replacement trays have been designed so that they can be cut down to fit a wall to wall space where a bath was previously installed. Although Radiate and Mantis are used with different waste applications the process of cutting to length is the same.

A conventional multi purpose handsaw can be used to cut the shower tray. Please exercise care when cutting the tray to not chip or damage the surface.

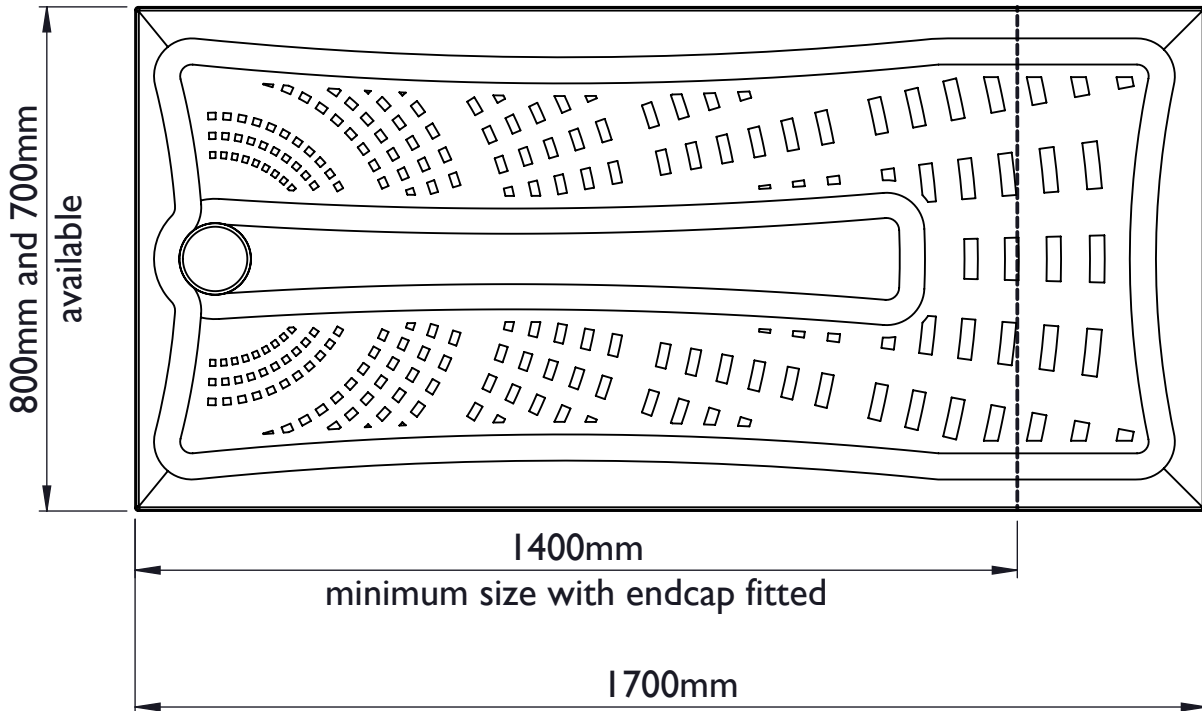


When measuring and cutting the tray please allow for the the end cap  
See illustration below.

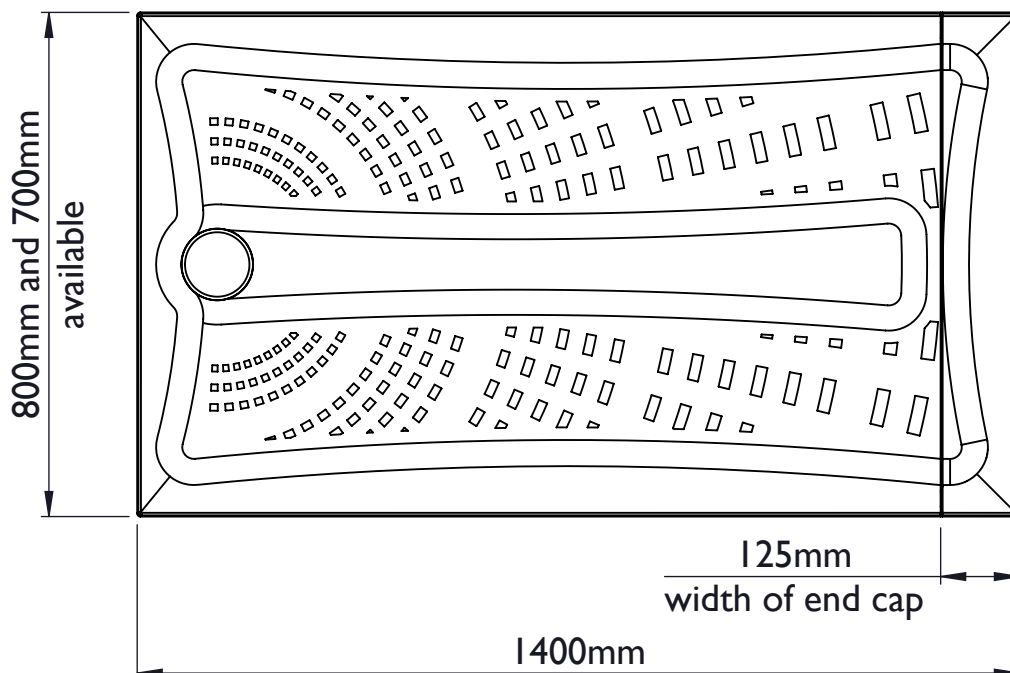


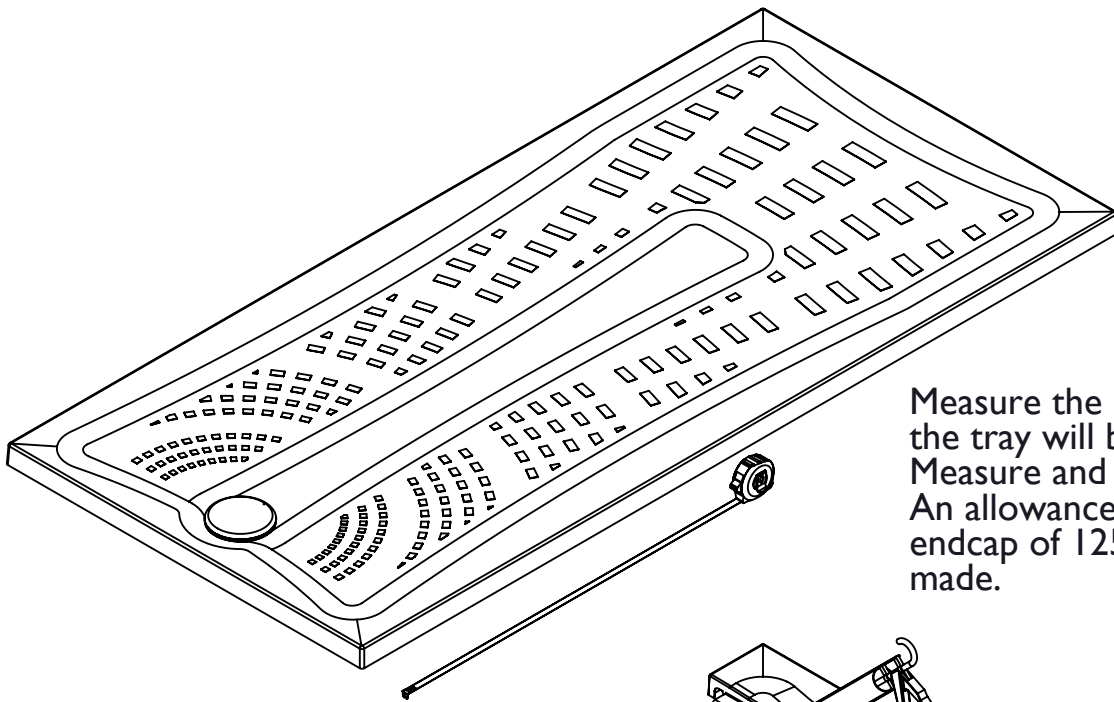

Measure the space where the tray will be installed. Measure and mark the tray. An allowance for the endcap of 125mm must be made.

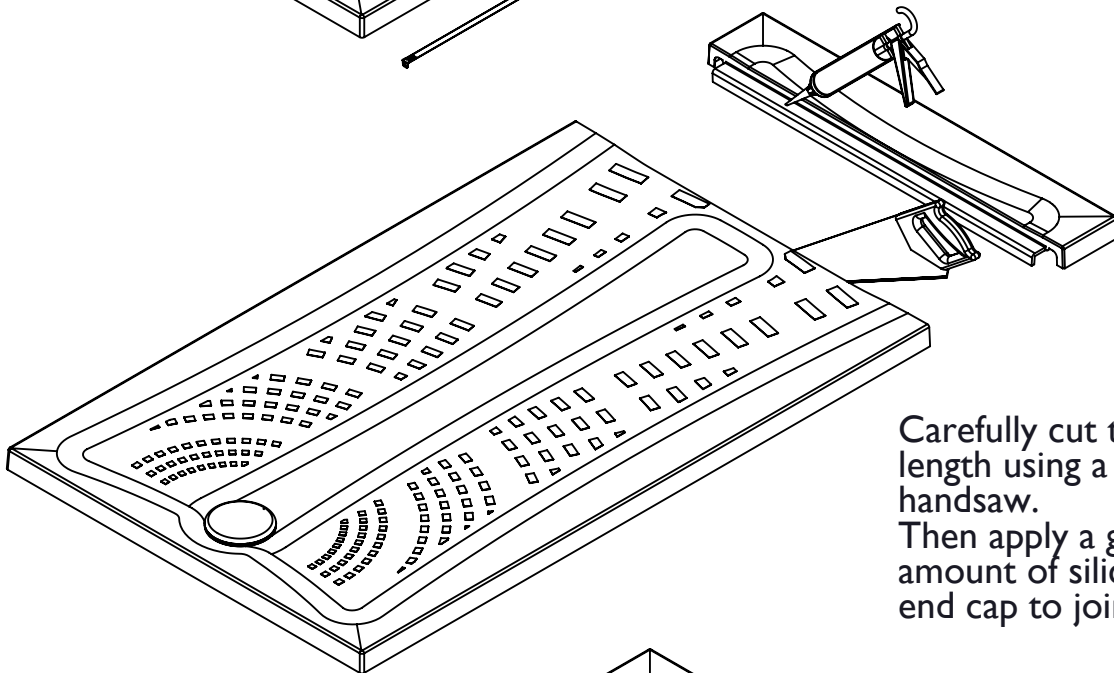

Carefully cut the tray to length using a multi purpose handsaw. Then apply a generous amount of silicone seal to the end cap to join to the tray.

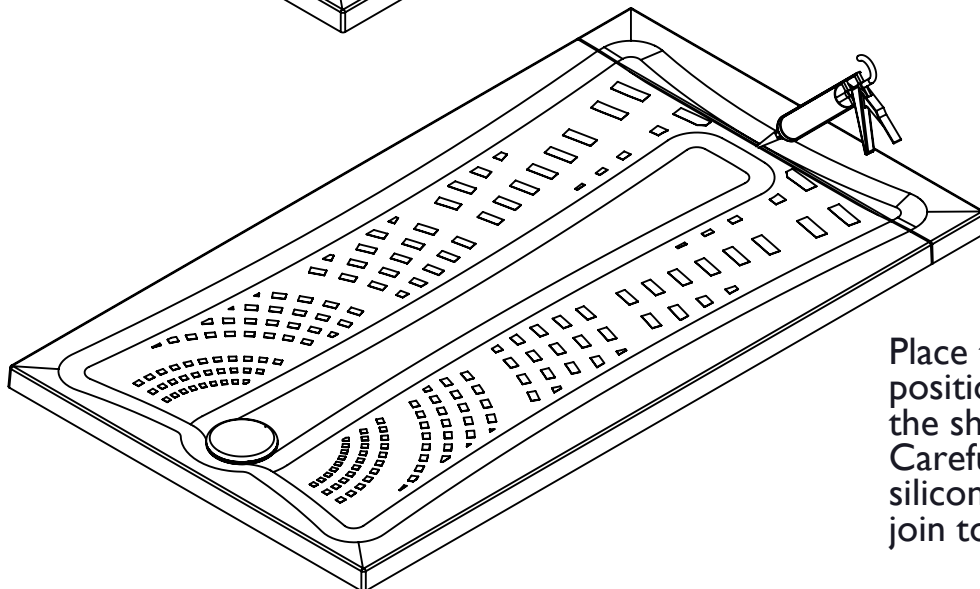

Place the end cap in position first and then place the shower tray. Carefully apply a bead of silicone sealant along the join to seal.