AS25SC01

impey

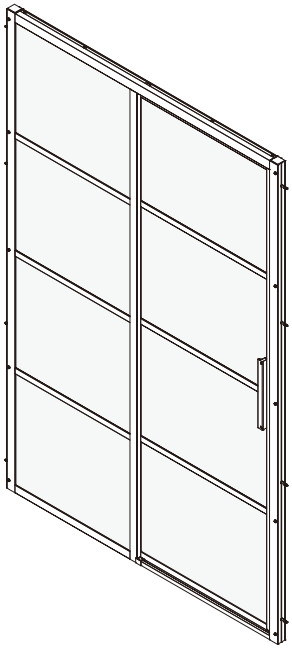

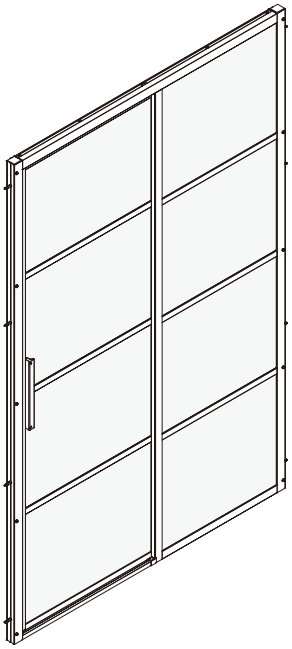

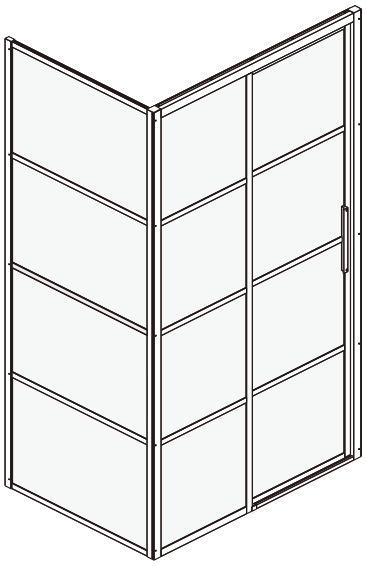

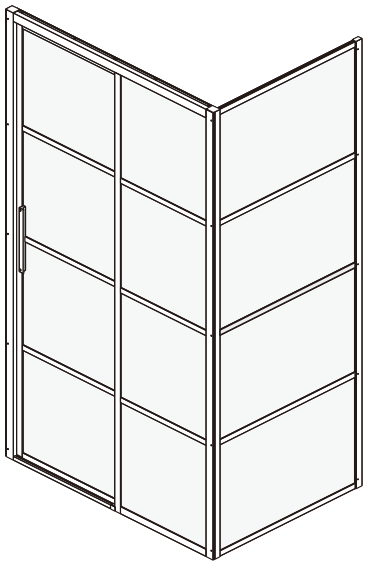

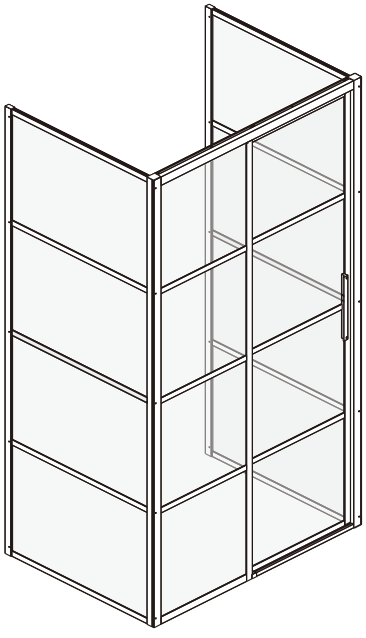

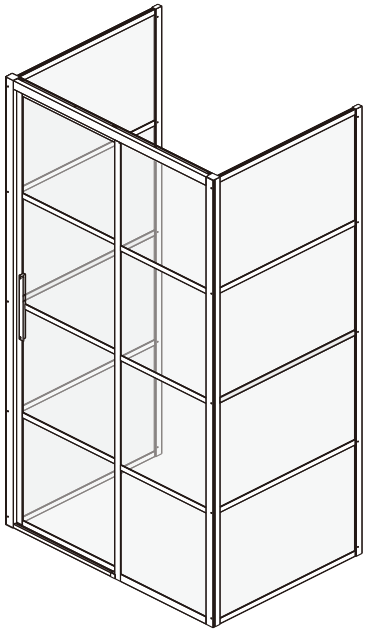

Update: 12172020

Before installation:
Check that the floor is level in all directions. The enclosure will not sit correctly on an uneven surface.
If uneven, the wall channels may not fit and the doors may not shut correctly.
The enclosure should be fitted on tiled walls which are sealed with waterproof grout.
If installing on a shower tray, there must be a good silicone seal between the rim of the shower tray and the wall.
The shower tray and the enclosure must match in size.
Attempting to fit the incorrect size of the enclosure to the shower tray will result in water leaks.
Always check very carefully that components are vertical.
To avoid damage, use the opened out packaging to build the enclosure on.

Included



WALL ANCHORS
MUUR PLUG CHEVILLE

SCREWS
SCHROEVEN VIS

ALLEN KEY
INBUSSLEUTEL CLÉALLEN

Additional tools

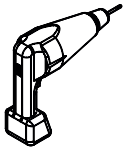

DRILL
BOOR PERCEUSE



DRILL BITS: 3.0MM, 6.0MM
DRILL BITS: 4.0MM, 6.0MM
BOOR BITS: 3.0MM, 6.0MM
FORETS: 3.0MM, 6.0MM

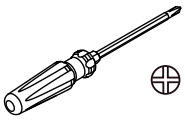

SCREW DRIVER
SCHROEVENDRAAIER TOURNEVIS

SILICONE
SILICONENKIT SILICONE



SPIRIT LEVEL
WATERPAS NIVEAU

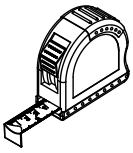

MEASURING TAPE
MEETLINT RUBAN À MESURER

PENCIL
POTLOOD CRAYON

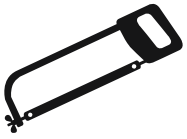

HACKSAW
IJZER ZAAG SCIE À FER

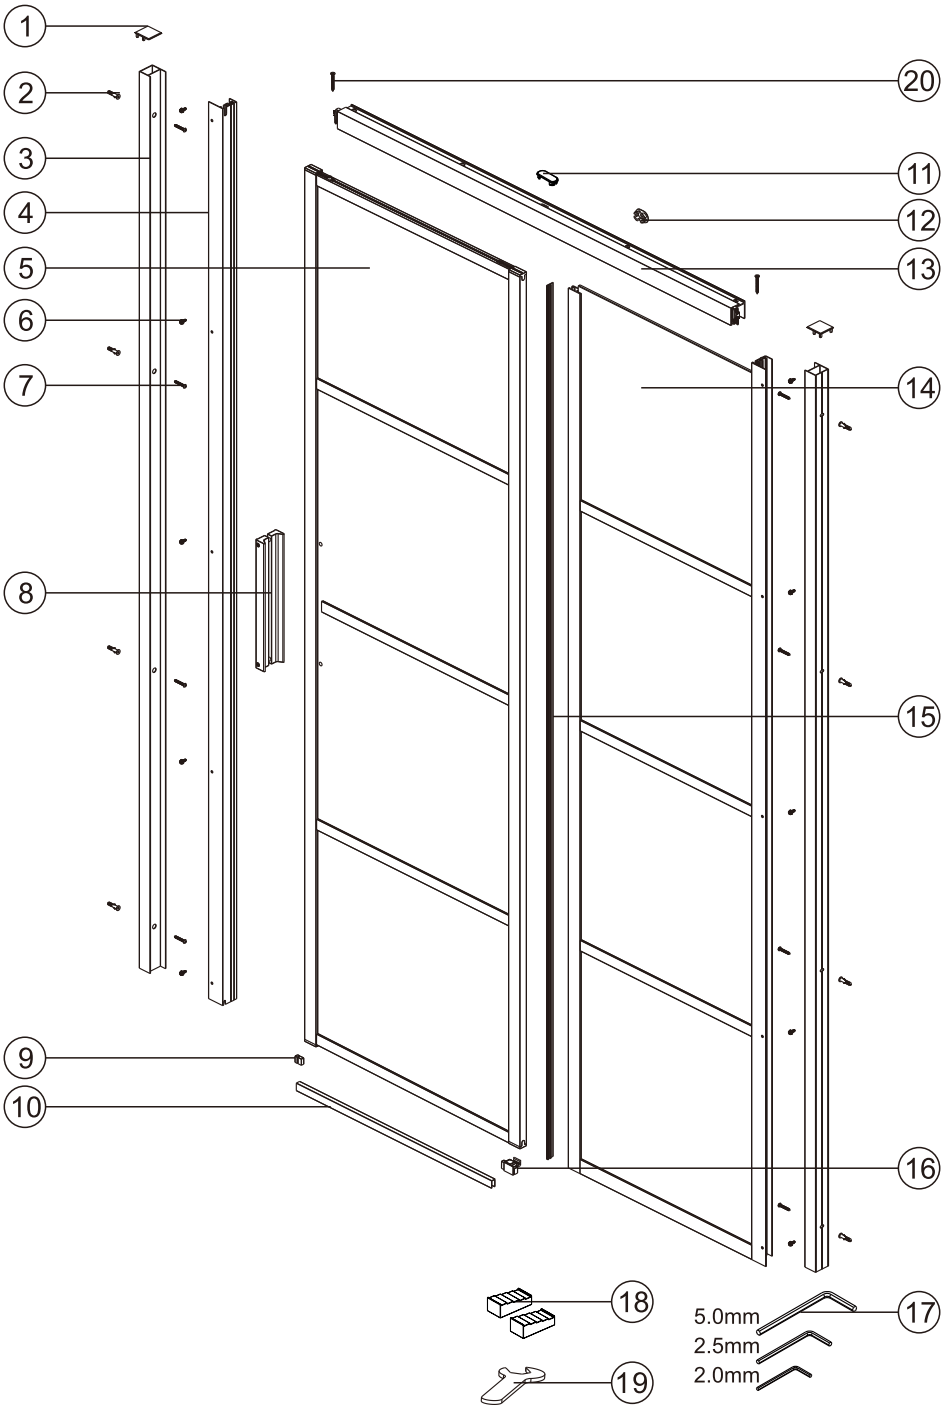

NO	Qty	Description	NO	Qty	Description
1	2	Wall profile top cover	11	1	Top profile cover cap
2	8	Wall anchor	12	1	Side profile cover cap
3	2	Wall profile	13	1	Horizontal profile
4	1	Magnet profile	14	1	Fixed panel
5	1	Moving door	15	1	Gasket
6	10	Screw ST4X12	16	1	Door guide
7	8	Screw ST4X30	17	3	Allen key
8	1	Handle	18	2	Door installation tool
9	1	Threshold bracket	19	1	Spanner
10	1	Threshold	20	2	Screw ST3.5X30

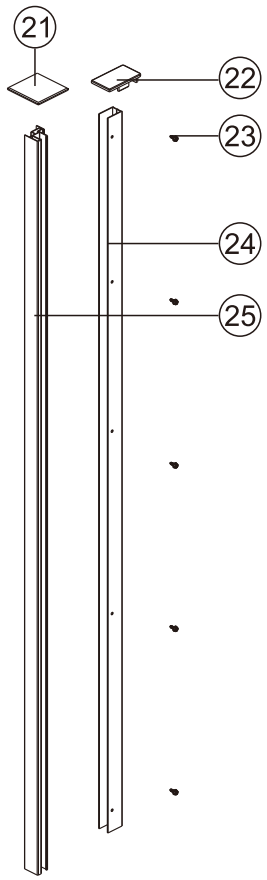

NO	Qty	Description
21	1	Cap for corner profile
22	1	Wall profile top cover
23	5	Screw ST4X12
24	1	Wall profile
25	1	Corner profile

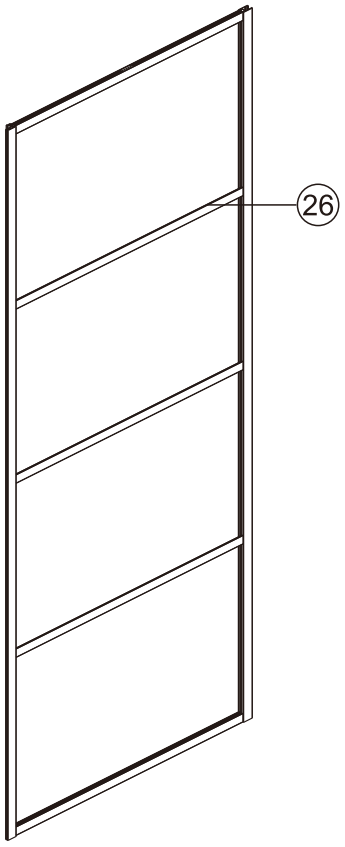

NO	Qty	Description
26	1	Fixed panel

A 01

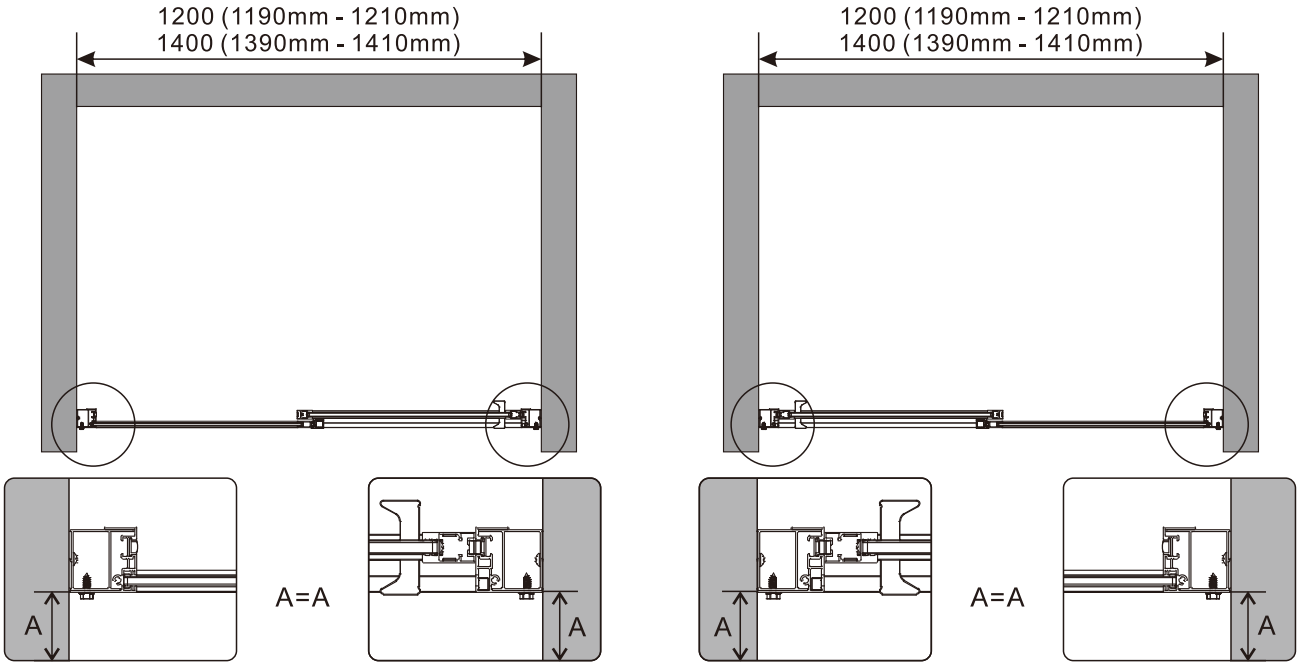

A 02 **Right hand installation shown**

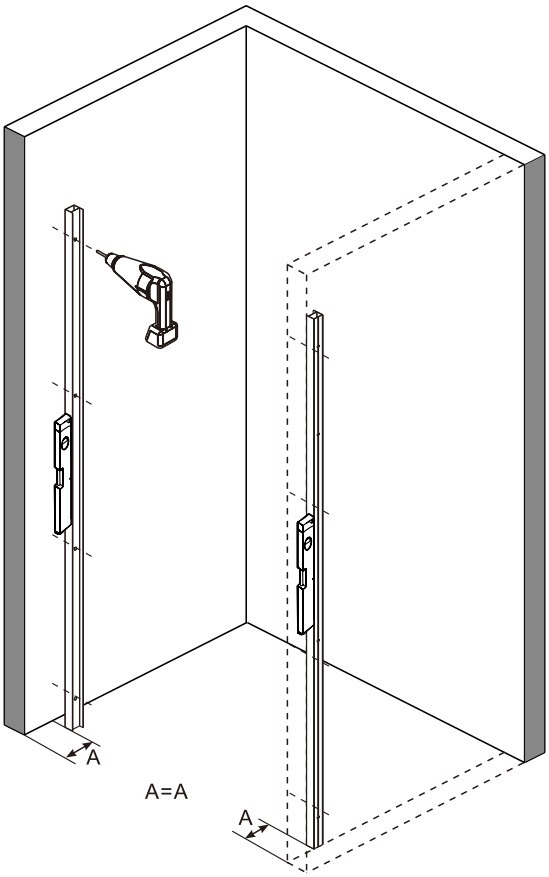

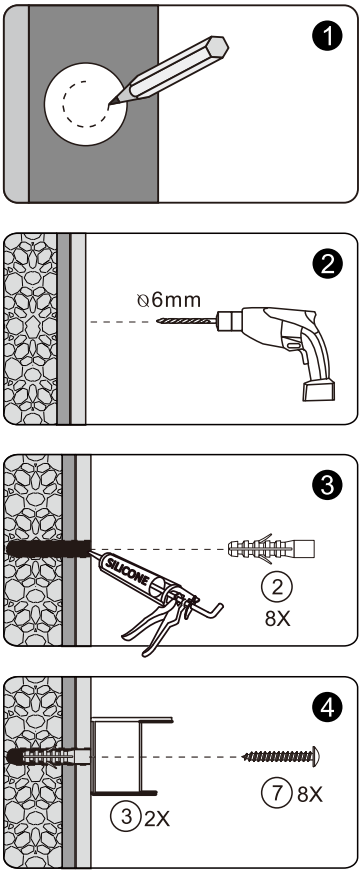

A 03

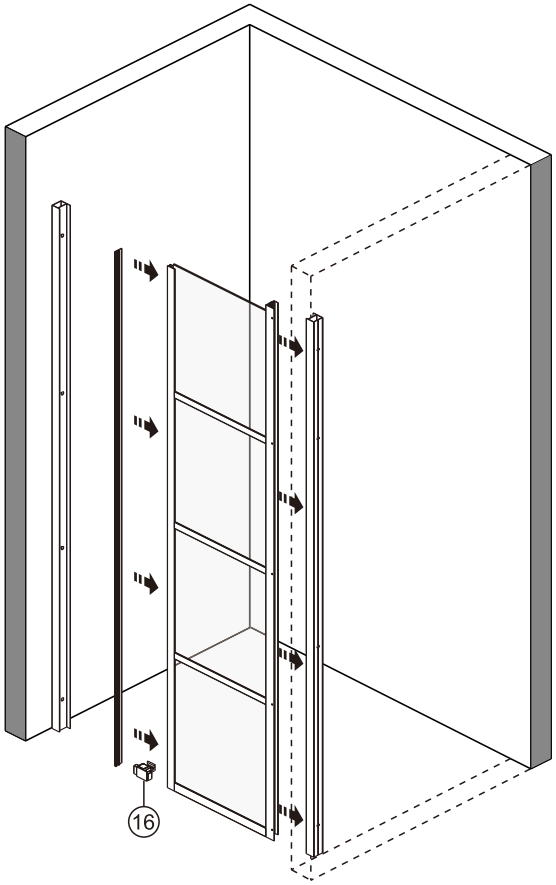
16

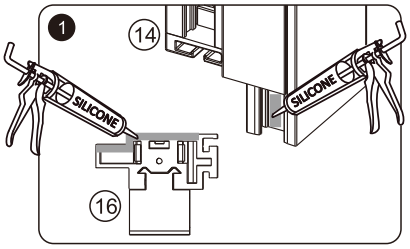
1
14
SILICONE
SILICONE
16

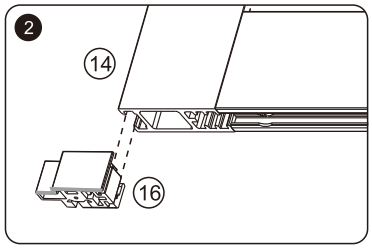
2
14
16

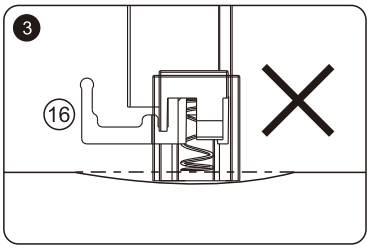
3
16

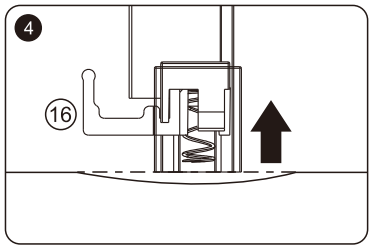
4
16

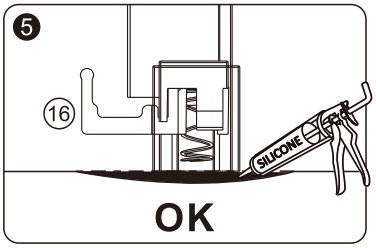
5
16
SILICONE
OK

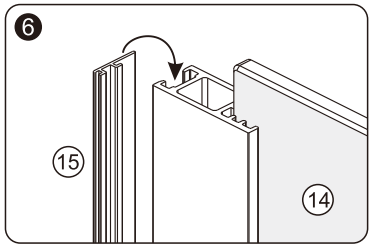
6
15
14

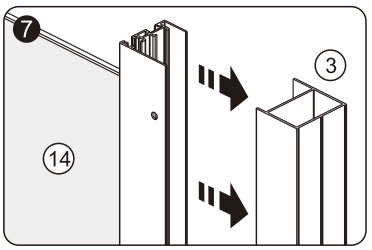
7
3
14

A 04

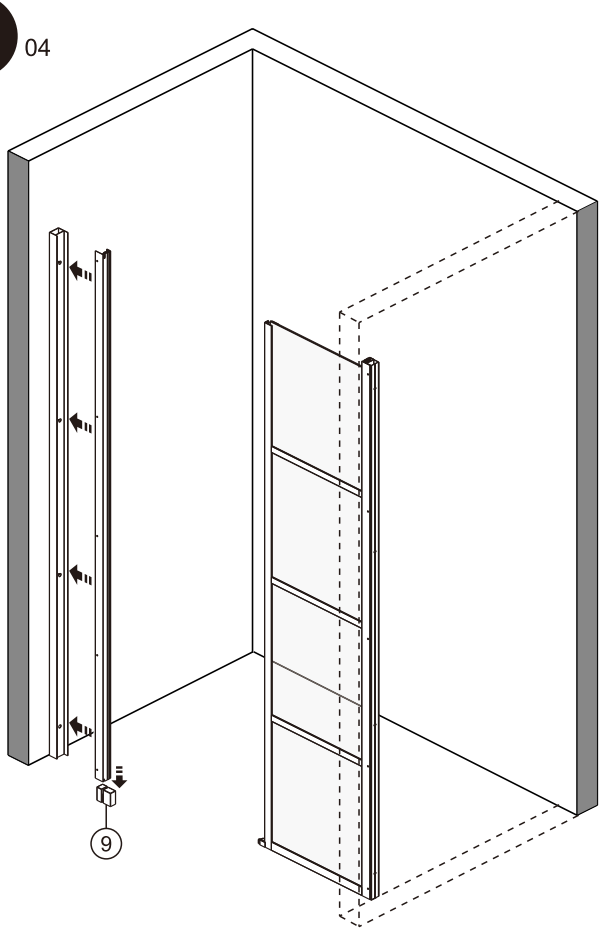
9

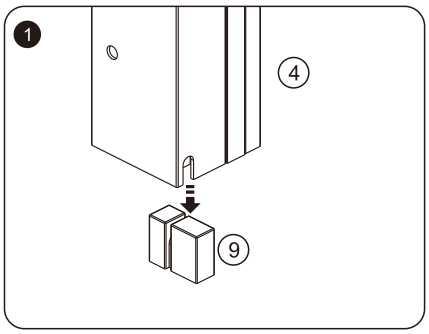
1
4
9

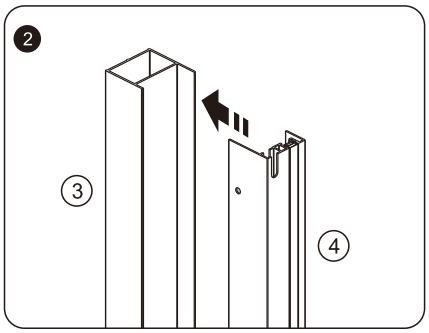
2
3
4

A 05

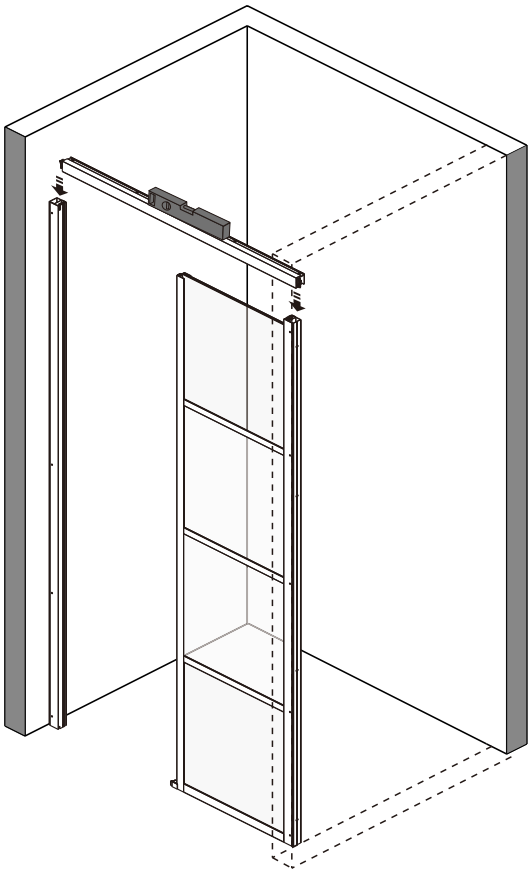

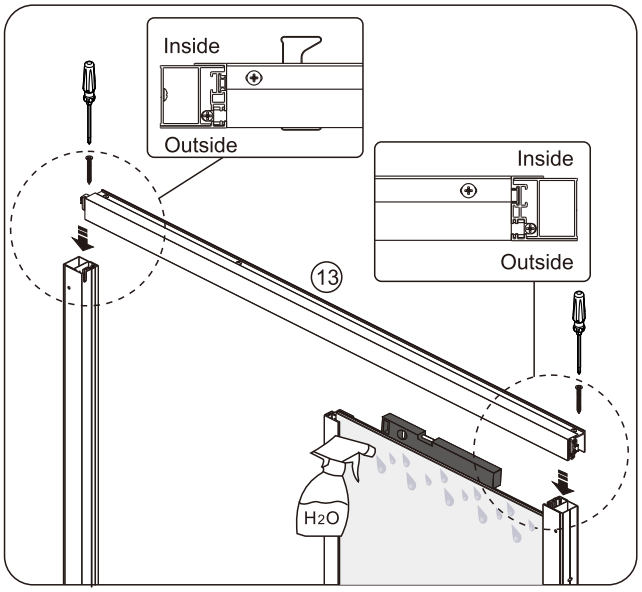
Inside
Outside
Inside
Outside
13
H2O

A 06

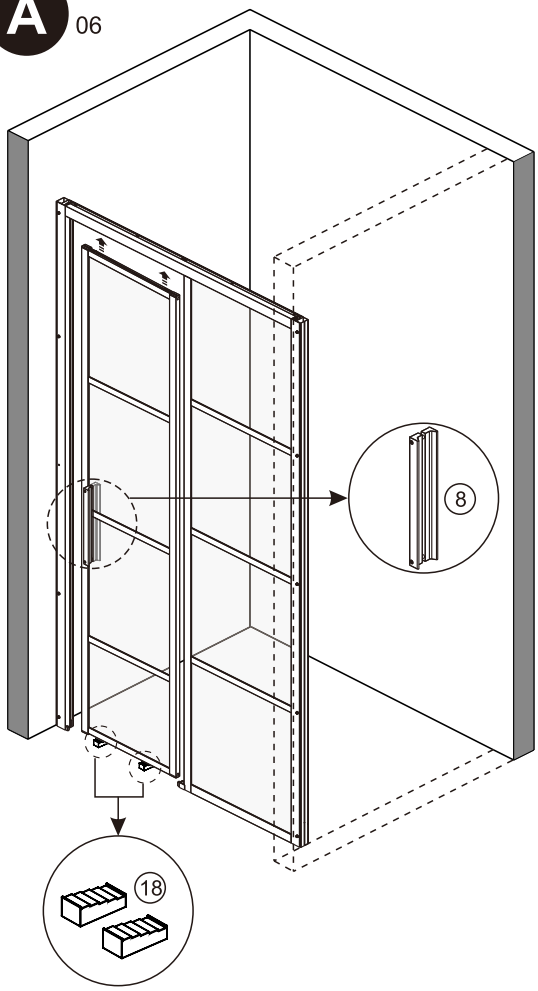
8
18

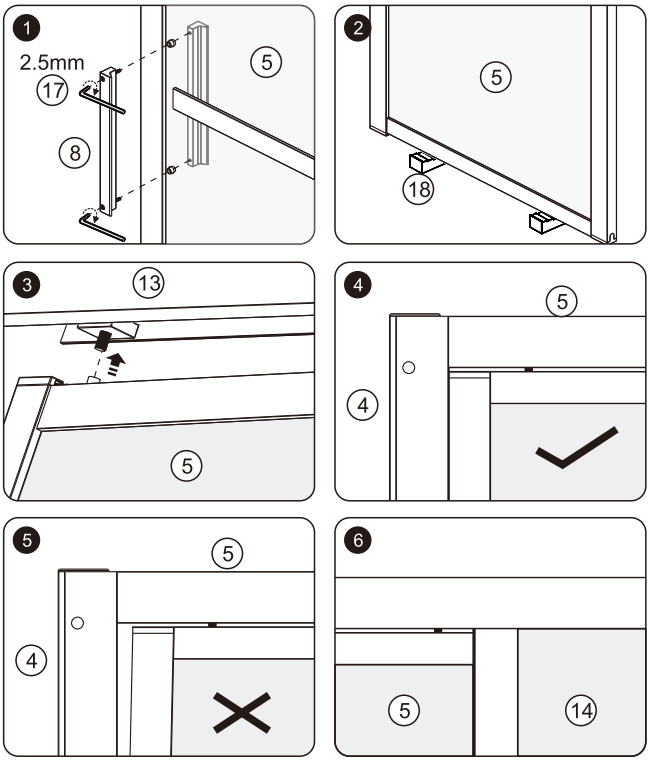
1
2.5mm
17
8
5
2
5
18
3
13
5
4
5
4
5
5
4
6
5
14

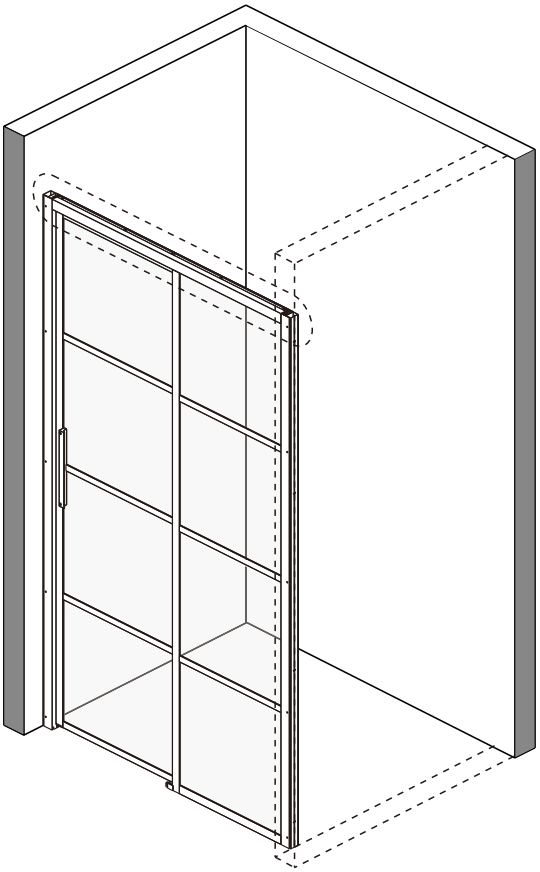

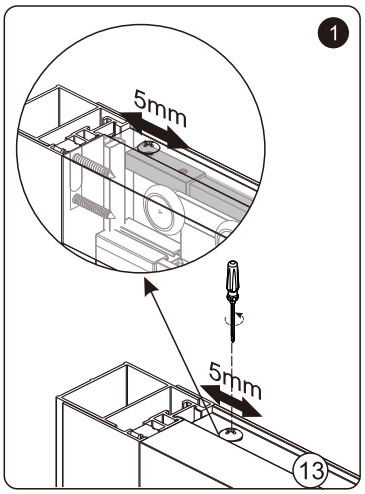

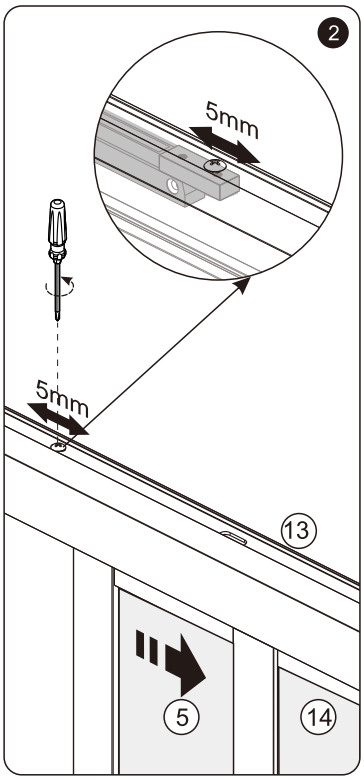

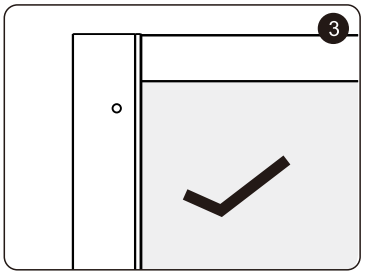

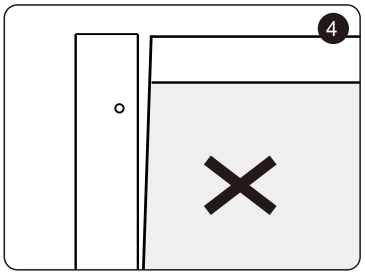

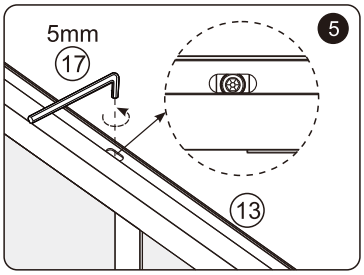

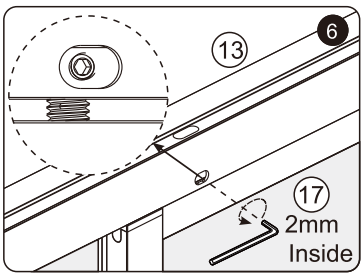

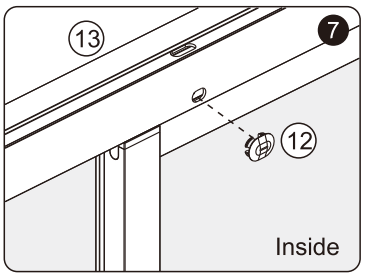

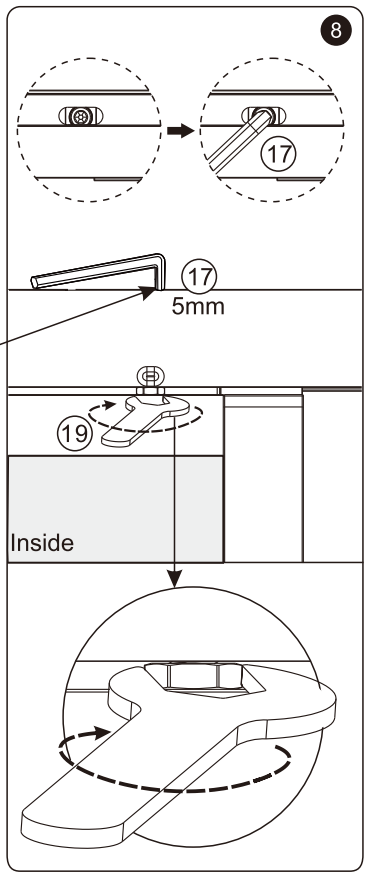

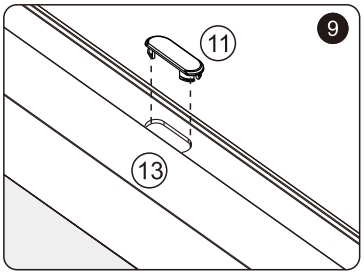

Insert Allen key into horizontal profile, to stop the screw from moving. Simultaneously, tighten the washer with the spanner.

A 08

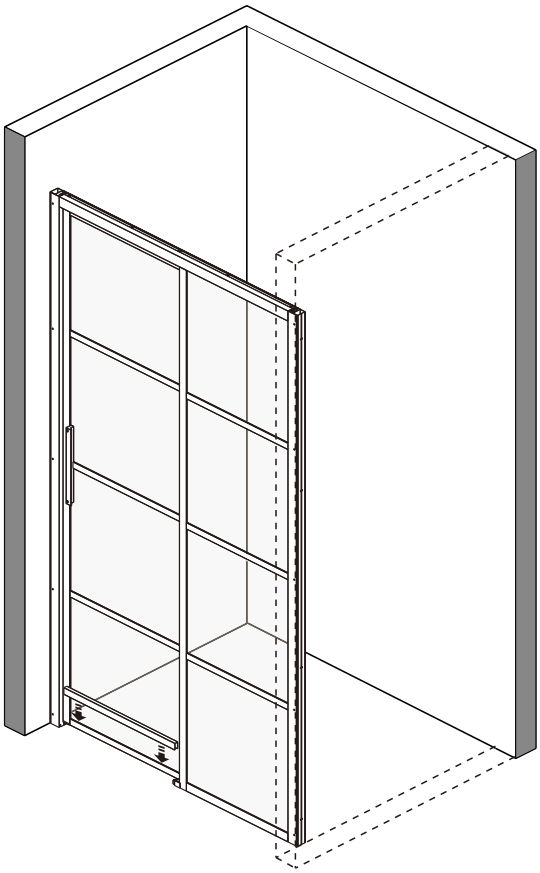

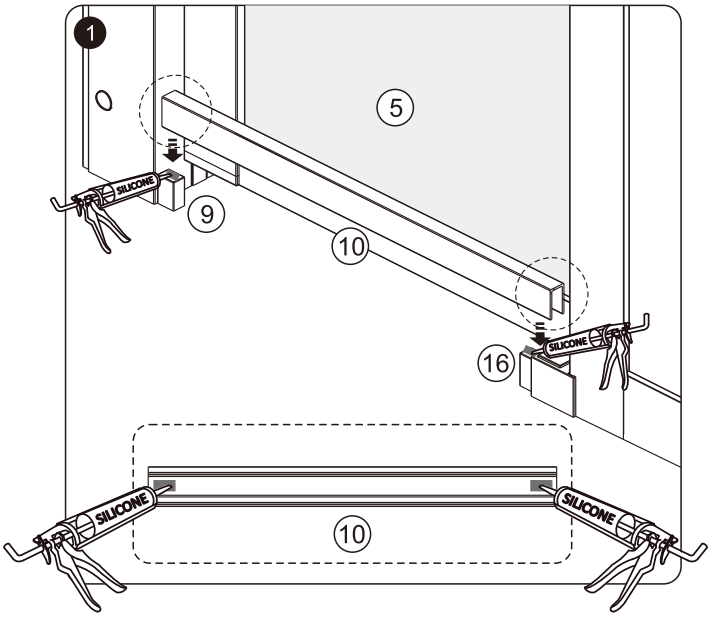
1
5
9
10
16
SILICONE
SILICONE
SILICONE
10

A 09

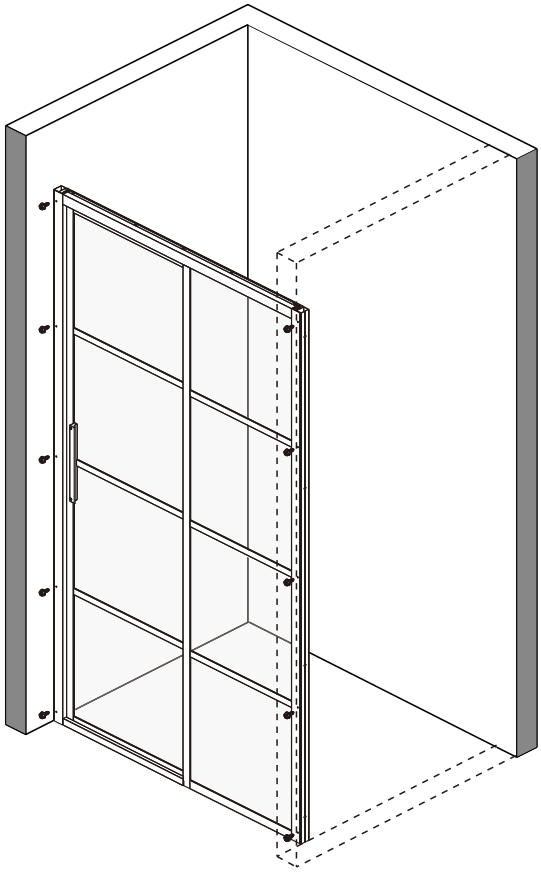

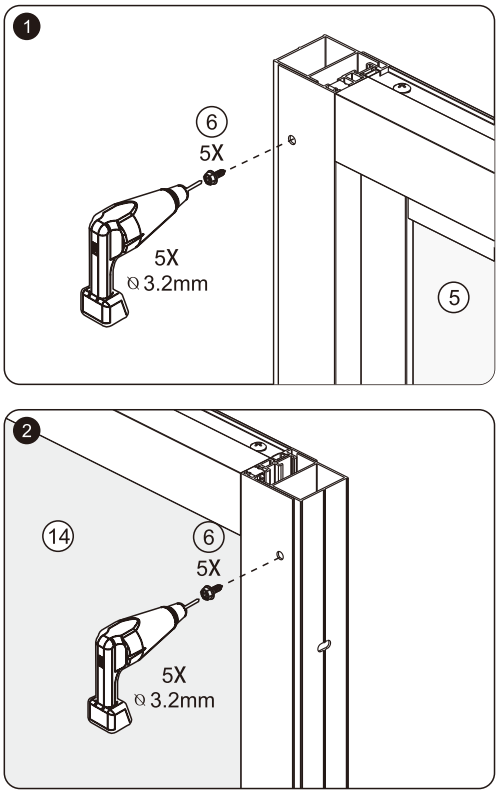
1
6
5X
5X
Ø 3.2mm
5
2
14
6
5X
5X
Ø 3.2mm

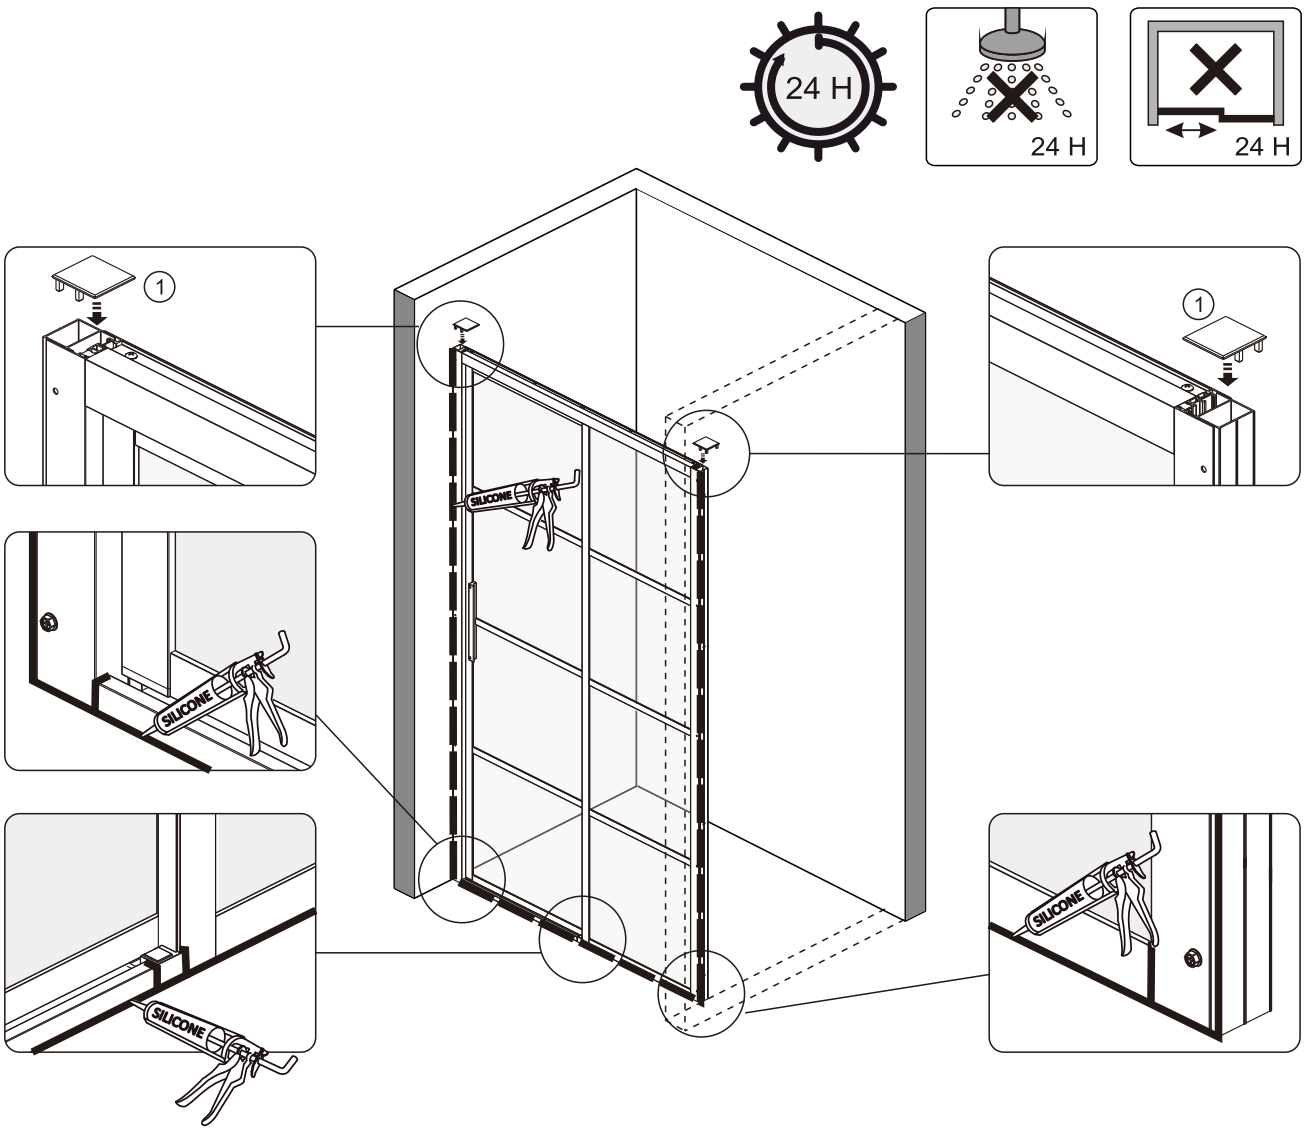
24 H
24 H
24 H
1
1
SILICONE
SILICONE
SILICONE
SILICONE

B 01

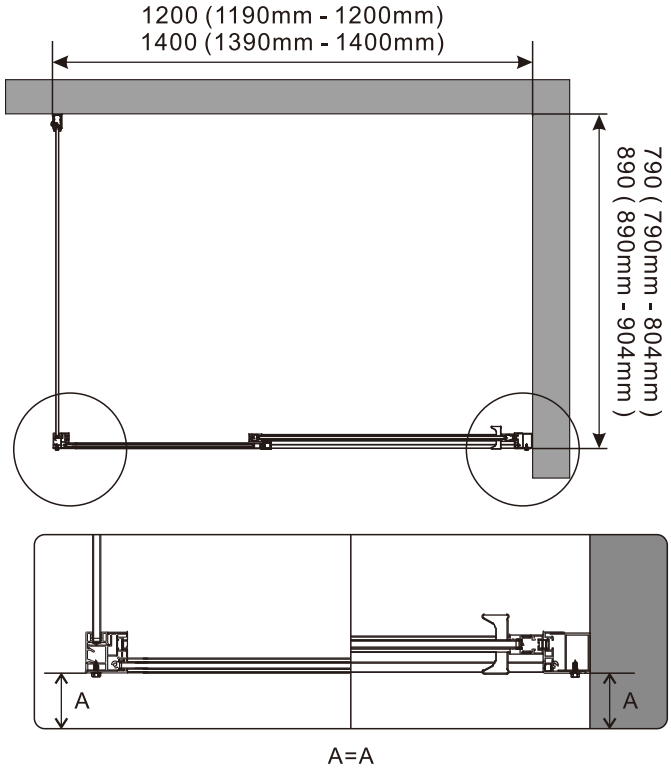
1200 (1190mm - 1200mm)
1400 (1390mm - 1400mm)
790 (790mm - 804mm)
890 (890mm - 904mm)
A
A
A=A
1200 (1190mm - 1200mm)
1400 (1390mm - 1400mm)
790 (790mm - 804mm)
890 (890mm - 904mm)
A
A
A=A

B 02

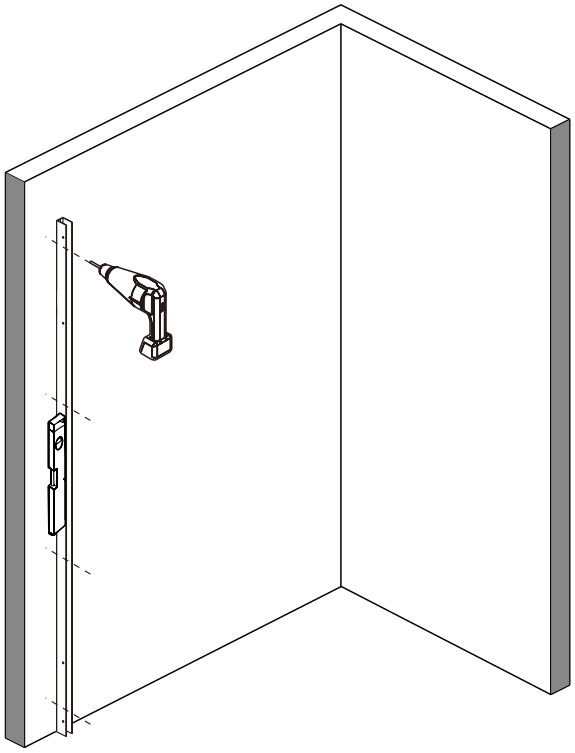

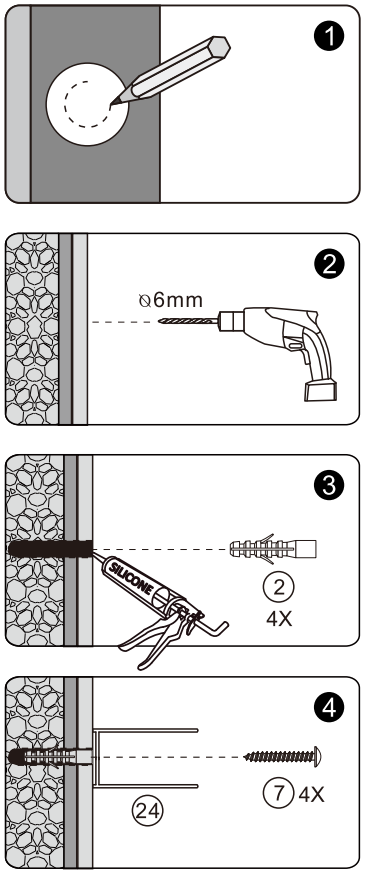
1
2
⌀6mm
3
SILICONE
2
4X
4
24
7 4X

B 03

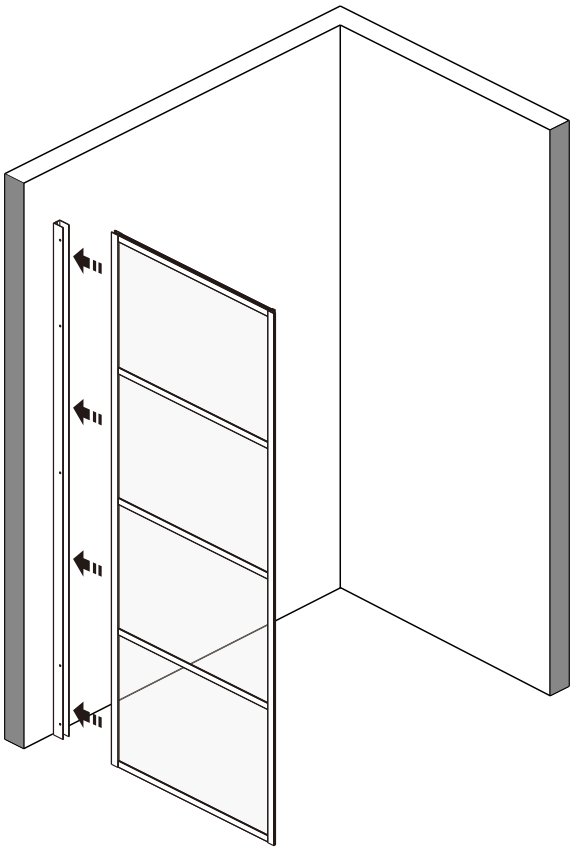

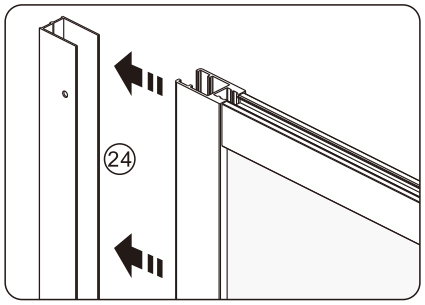

B 04

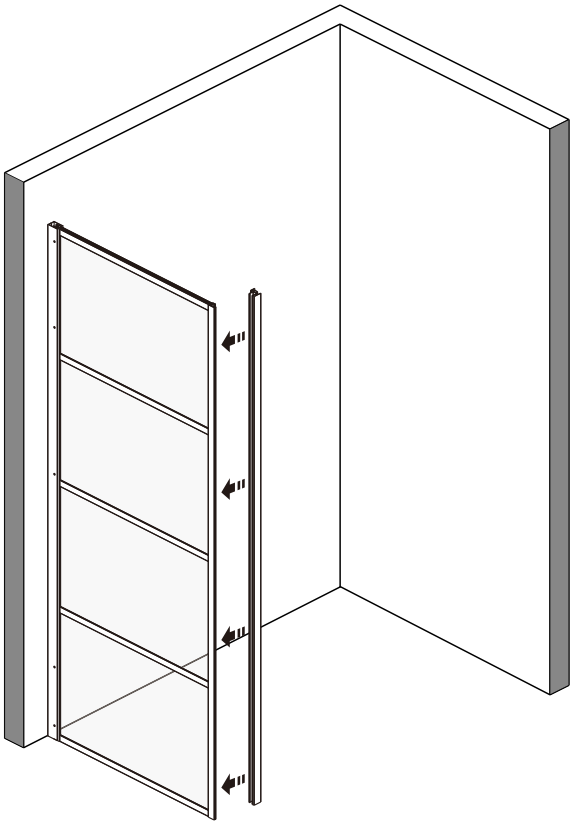

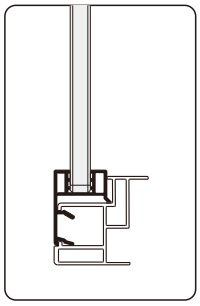

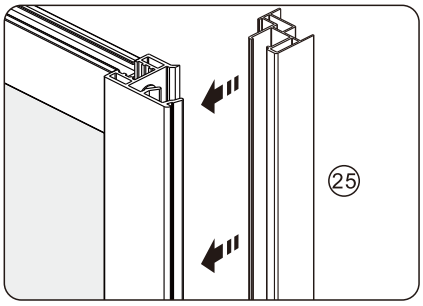

B 05

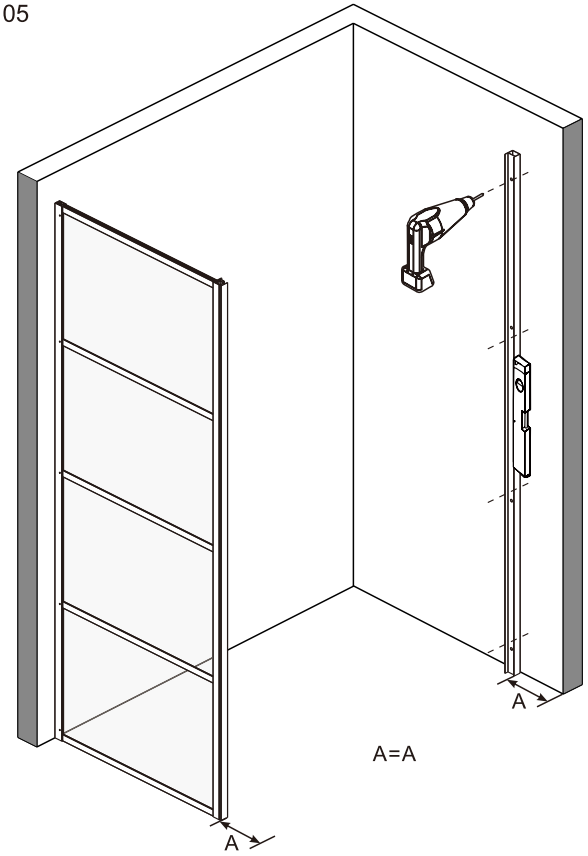

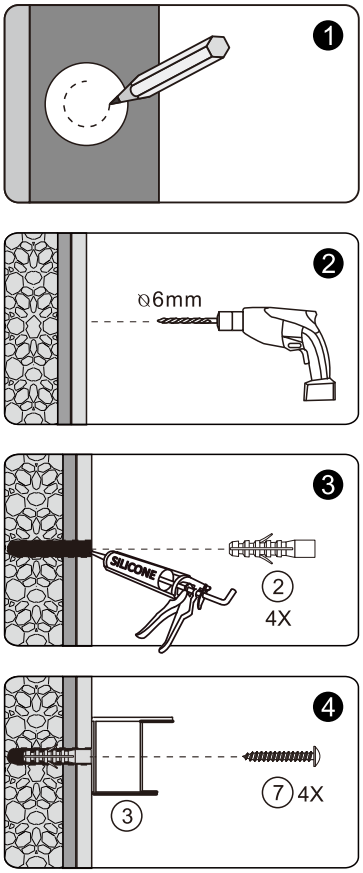

Refer to steps A03, A05 - A09

B 06

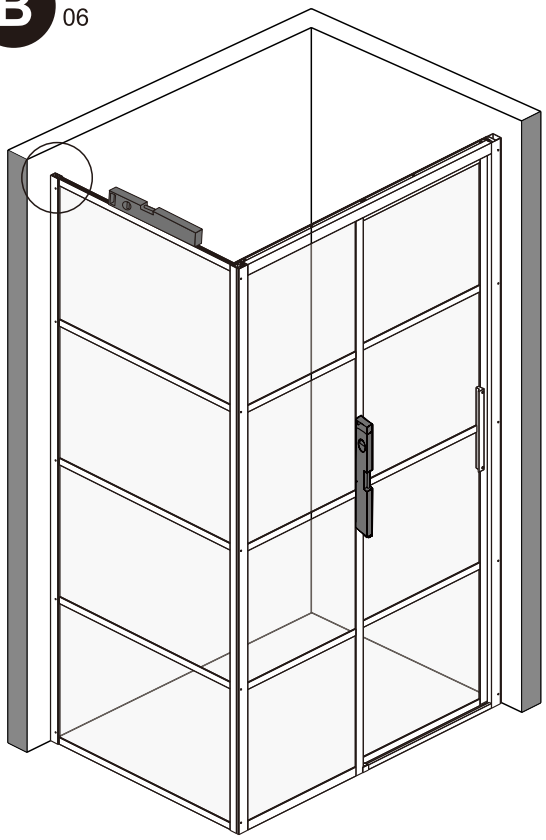

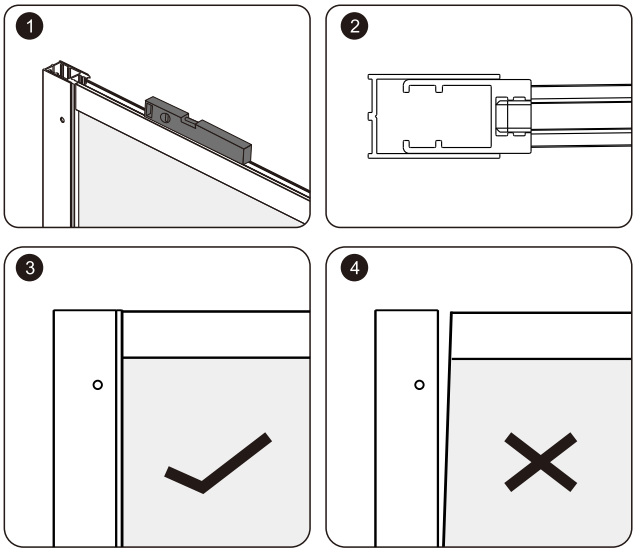

B 07

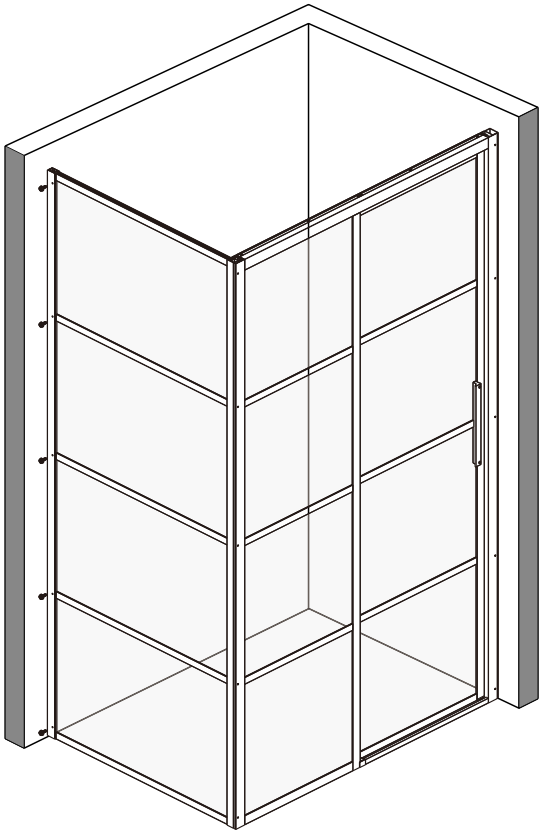

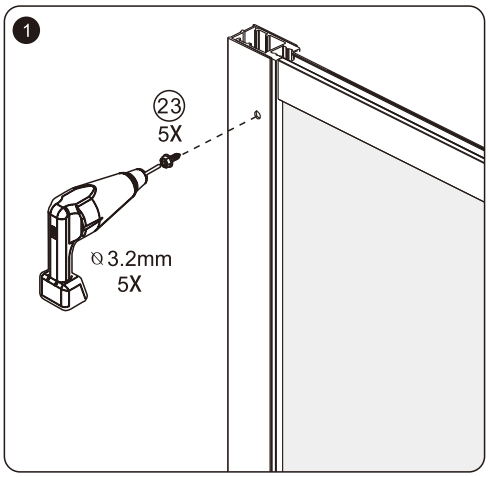

B 08

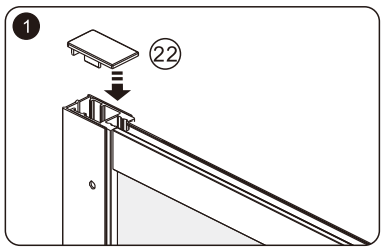

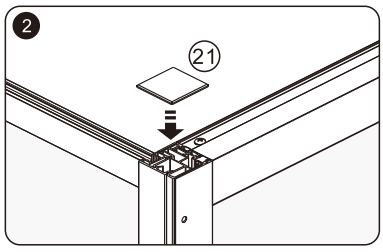

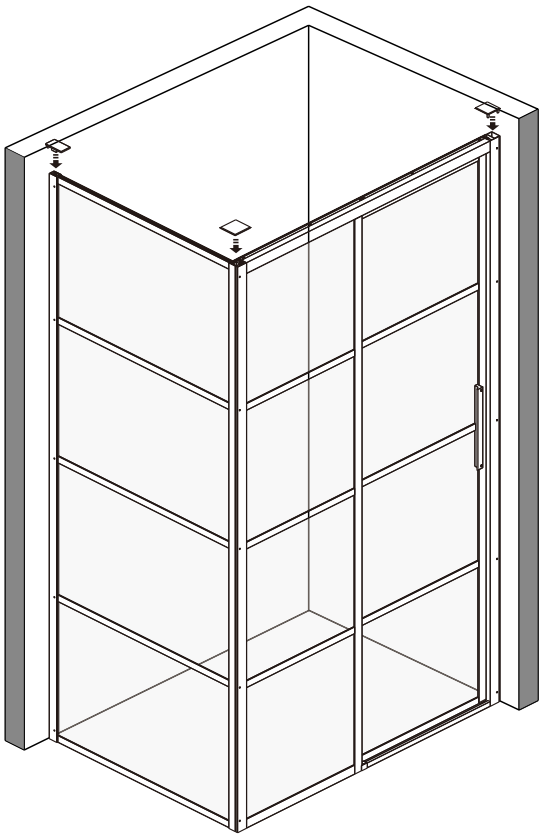

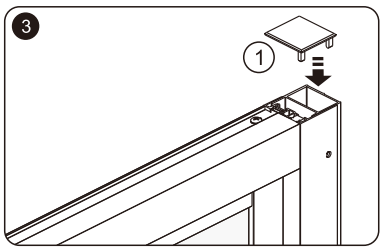
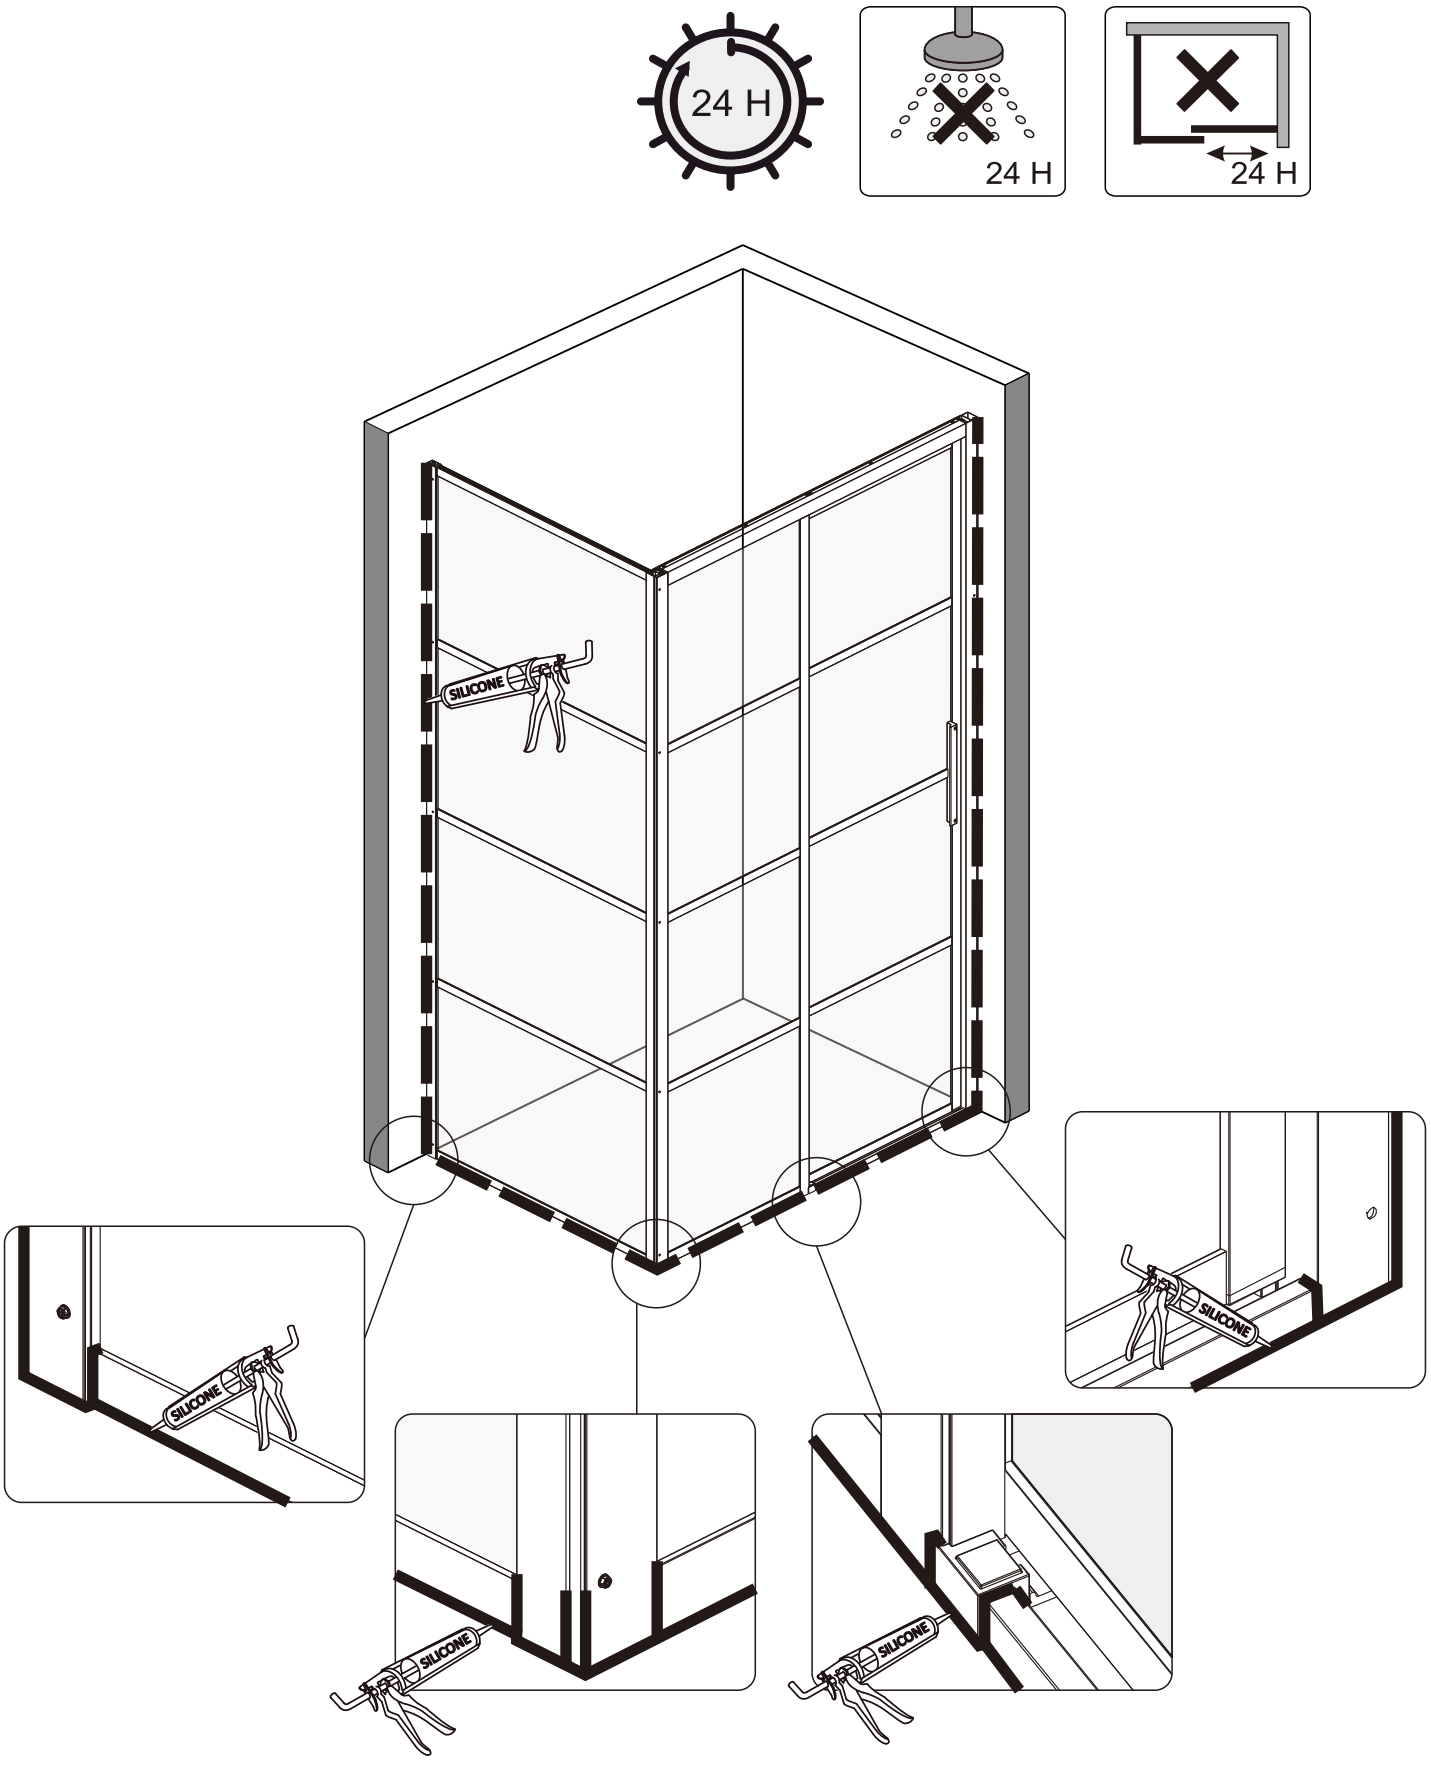
B 09